



*Light. Form. Harmony.*

A calm surface, designed for modern bathrooms.

---

## Design language

- Clean geometry and ultra-slim edge.
- Square drain cover aligned to the surface.
- A texture that hides water marks and keeps a natural look.
- SMC composite (Sheet Molding Compound) — mineral-filled, high-strength material used for premium sanitary surfaces.

*Built for projects and everyday homes: easy to specify, easy to install, and easy to maintain.*

## Key Benefits


- 5-year warranty
- Anti-slip surface - Class C (EN 14527)
- Anti-bacterial finish
- Silica-free
- Cut-to-size on site
- Easy to clean





# Sizes & References

Commercial codes for ordering and stock control.

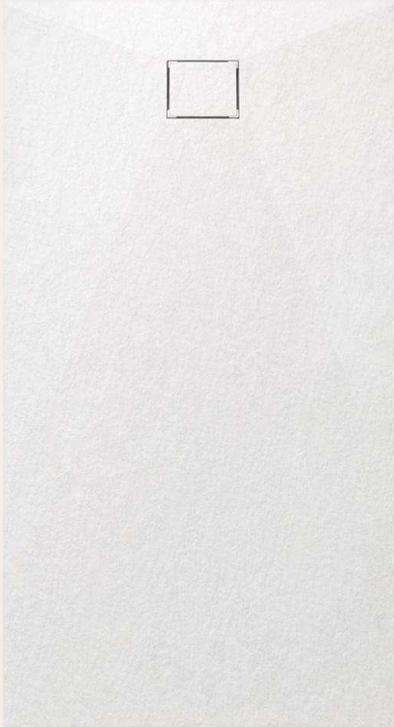

White | Textured Finish

## INCLUDED

### Drain System

SMC Cover - 118 × 118 mm  
Tray-matched finish



Waste Trap - Ø115 × 195 mm  
Waste outlet: Ø90 mm  
Flow rate: 19 L/min (cover)  
27 L/min (open)



## OPTIONAL ACCESSORY

### Perforated S/S Cover

Stainless Steel Cover (304)  
118 × 118 mm  
Ref: NOMDC01B  
Barcode: 5291840026762



Size (cm)	Depth (cm)	Ref	Barcode
80 × 80	2.6	LW8080	5291840026755
100 × 80	2.6	LW10080	5291840026762
120 × 80	2.6	LW12080	5291840026779
140 × 80	2.6	LW14080	5291840026786
160 × 80	2.6	LW16080	5291840026793
180 × 80	2.6	LW18080	5291840026809
90 × 90	2.6	LW9090	5291840026830
160 × 90	2.6	LW16090	5291840026823
120 × 90	2.6	LW12090	5291840026816

## Overview




---

### Overview (leaflet included in every box)

1. Prepare a solid, level base.
2. Dry-fit the tray and confirm the waste position.
3. Connect the waste and test drainage.
4. Bed the tray using suitable flexible adhesive/mortar (installer standard).
5. Seal the perimeter with sanitary silicone.


*Always follow local building standards and professional installation practice.*

---

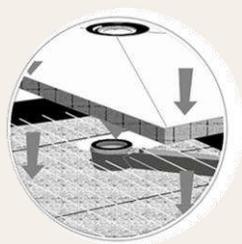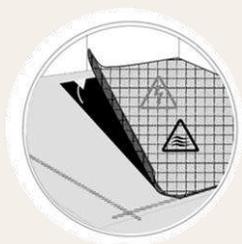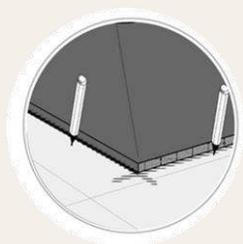

# Cut-to-Size Guide

Trim-to-fit on site for perfect wall alignment.

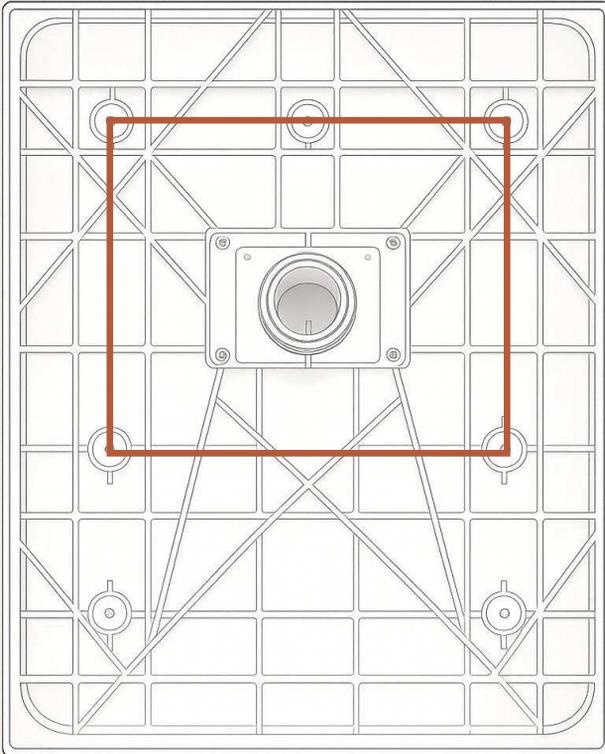


Red zone (20 x 20 cm) - NO CUT  
Outer perimeter - CUT ALLOWED

## Where you can cut

- Cutting is allowed on the outer edges only.
- Do not cut inside the marked drain zone.
- Maintain a 20 x 20 cm no-cut zone centred on the drainage outlet.

## How to cut (professional use)

1. Mark the cut line and check measurements twice.
2. Use a diamond blade suitable for mineral-filled materials.
3. Cut slowly and evenly to avoid chipping.
4. Smooth the edge with fine abrasive pad.
5. Seal/finish the cut edge (as per installer standard) before installation.
6. Dry fit the tray before final installation.

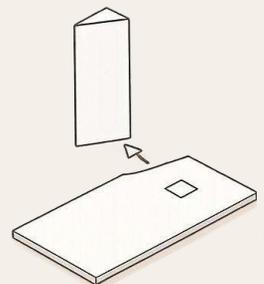

**Note:** Cutting must be performed by a professional installer.

Simple routines for long-term beauty

---

## Daily

- Rinse with water and wipe with a soft cloth.
- Dry to keep the surface looking perfect.

## Deep clean (when needed)

- Use neutral pH detergent with a soft sponge.
- Rinse thoroughly and dry.

## Avoid

- Abrasive pads / scouring powders
- Bleach, strong acids, strong alkalis
- Solvents or aggressive chemical cleaners
- Metal brushes / steel wool
- Steam cleaners / high-temperature jets

**Tip:** For limescale, use a mild neutral cleaner and rinse well.



Light. Form. Harmony.