



Light. Form. Harmony.

A calm surface, designed for modern bathrooms.

Design language

- Clean geometry and ultra-slim edge.
- Square drain cover aligned to the surface.
- A texture that hides water marks and keeps a natural look.
- SMC composite (Sheet Molding Compound) — mineral-filled, high-strength material used for premium sanitary surfaces.

Built for projects and everyday homes: easy to specify, easy to install, and easy to maintain.

Key Benefits


- 5-year warranty
- Anti-slip surface - Class C (EN 14527)
- Anti-bacterial finish
- Silica-free
- Cut-to-size on site
- Easy to clean





Sizes & References

Commercial codes for ordering and stock control.

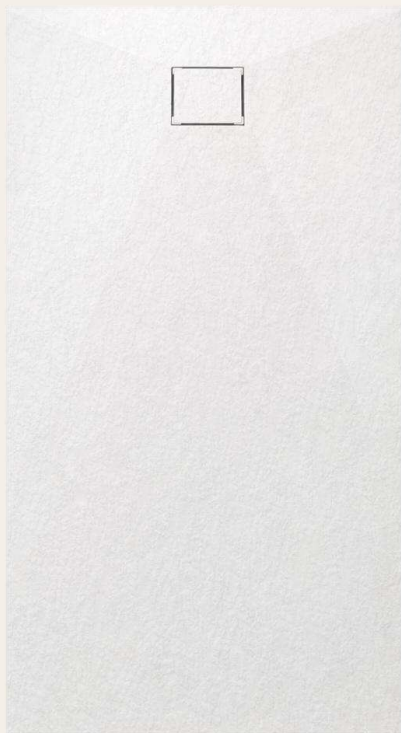

White | Textured Finish

INCLUDED

Drain System

SMC Cover - 118 × 118 mm
Tray-matched finish
Flow rate: 27 L/min



Waste Trap - Ø115 × 195 mm
Waste outlet: Ø90 mm



OPTIONAL ACCESSORY

Perforated S/S Cover

Stainless Steel Cover (304)
118 × 118 mm
Flow rate: 38 L/min
Ref: NOMDC01B
Barcode: 5291840026847





Size (cm)	Depth (cm)	Ref	Barcode
80 × 80	2.6	LW8080	5291840026755
100 × 80	2.6	LW10080	5291840026762
120 × 80	2.6	LW12080	5291840026779
140 × 80	2.6	LW14080	5291840026786
160 × 80	2.6	LW16080	5291840026793
180 × 80	2.6	LW18080	5291840026809
90 × 90	2.6	LW9090	5291840026830
120 × 90	2.6	LW12090	5291840026816
160 × 90	2.6	LW16090	5291840026823

Overview

Overview (leaflet included in every box)


1. Prepare a solid, level base.
2. Dry-fit the tray and confirm the waste position.
3. Connect the waste and test drainage.
4. Bed the tray using suitable flexible adhesive/mortar (installer standard).
5. Seal the perimeter with sanitary silicone.

Always follow local building standards and professional installation practice.

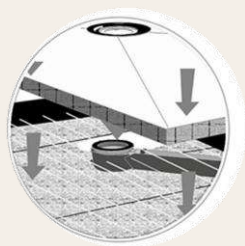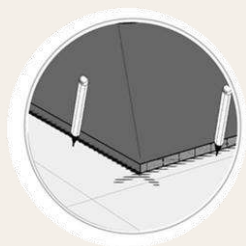

Cut-to-Size Guide

Trim-to-fit on site for perfect wall alignment.

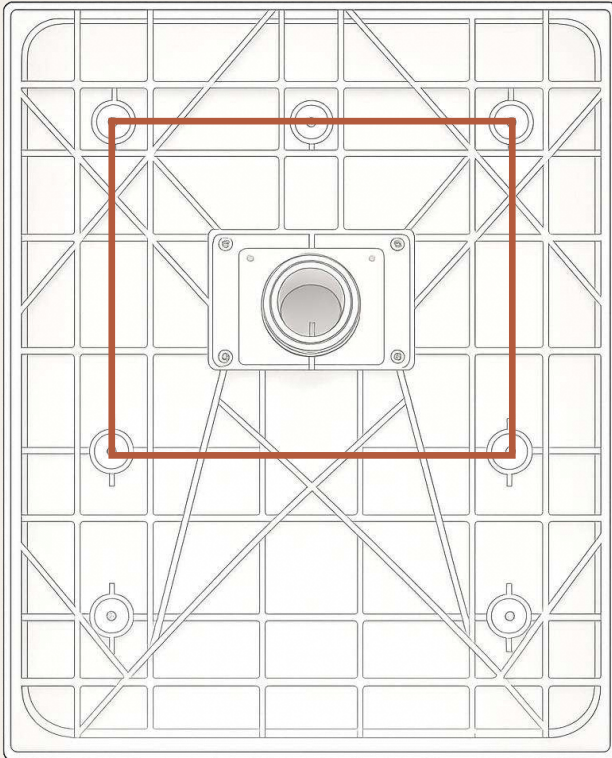


Red zone (20 x 20 cm) - NO CUT
Outer perimeter - CUT ALLOWED

Where you can cut

- Cutting is allowed on the outer edges only.
- Do not cut inside the marked drain zone.
- Maintain a 20 x 20 cm no-cut zone centred on the drainage outlet.

How to cut (professional use)

1. Mark the cut line and check measurements twice.
2. Use a diamond blade suitable for mineral-filled materials.
3. Cut slowly and evenly to avoid chipping.
4. Smooth the edge with fine abrasive pad.
5. Seal/finish the cut edge (as per installer standard) before installation.
6. Dry fit the tray before final installation.

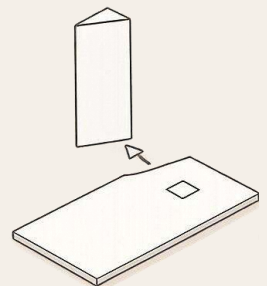

Note: Cutting must be performed by a professional installer.

Simple routines for long-term beauty

Daily

- Rinse with water and wipe with a soft cloth.
- Dry to keep the surface looking perfect.

Deep clean (when needed)

- Use neutral pH detergent with a soft sponge.
- Rinse thoroughly and dry.

Avoid

- Abrasive pads / scouring powders
- Bleach, strong acids, strong alkalis
- Solvents or aggressive chemical cleaners
- Metal brushes / steel wool
- Steam cleaners / high-temperature jets

Tip: For limescale, use a mild neutral cleaner and rinse well.



Light. Form. Harmony.